


# SHARP

## R-757M

### QUICK START GUIDE

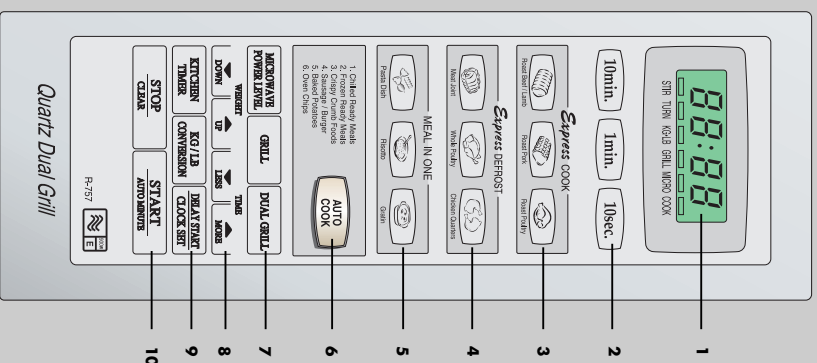

- 1 DIGITAL DISPLAY
- 2 TIME keys
- 3 EXPRESS COOK keys
- 4 EXPRESS DEFROST keys
- 5 MEAL IN ONE keys
- 6 AUTO COOK key
- 7 MICROWAVE POWER LEVEL key
- 8 DUAL GRILL key
- 9 WEIGHT INCREASE/DECREASE keys
- 10 LESS/MORE keys
- 11 KITCHEN TIMER key
- 12 WIGHT CONVERSION key
- 13 DELAY START/CLOCK SET key
- 14 START/AUTO MINUTE key
- 15 STOP/CLEAR key
- 16 DUAL GRILL key


**Read SAFETY WARNINGS in the Operation Manual before operating**

TINS-A312URRO

# 1

## INSTALLATION


1. Remove all packaging and accessories from the oven, including the feature sticker fixed to the outside of the door and the wrapping shown in the diagram. **DO NOT REMOVE THE WAVEGUIDE COVER,** this can be found on the right hand side wall inside your microwave. Please see page 5 in the operation manual.

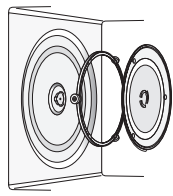

2. Ensure there is at least 19.5cm of free space above the oven.

3. Ensure the turntable parts are assembled as shown in the diagrams opposite.


**Other Accessories**  
The rocks can be used for "Grilling" or "Dual Grilling" of food.

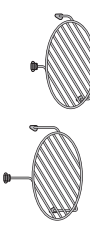

# 2

## GETTING STARTED

Plug in the oven.  
The oven display will flash:  
Press the **STOP/CLEAR** key:  
The display will now show:  
The oven is now ready for use.

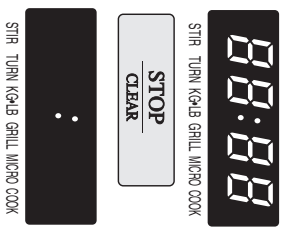

To set the clock, follow the instructions "SETTING THE CLOCK" below.

**NOTE:**  
When using the grill for the very first time: Heat the oven using **GRILL** mode without food for 20 minutes. See note on page 11 of the Operation Manual.


Website: [www.sharp.co.uk/customer-support](http://www.sharp.co.uk/customer-support)

Help Line: **08705 274277** (U.K.)  
**(01) 676 0648** (Ireland)  
(office hours)


## SETTING THE CLOCK

Your oven is fitted with a 12 and 24 hour clock. To set the time of day, ensure the door is closed and follow the guidelines given below:

1. Press the **DELAY START/CLOCK SET** key once for 12H or twice for 24H.

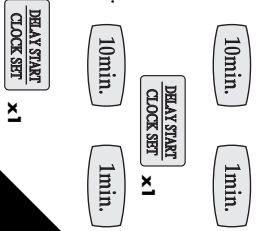

2. Enter the hours by pressing the **TIME** keys.

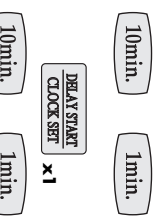

3. Press the **DELAY START/CLOCK SET** key again and enter the minutes by pressing the **TIME** keys.

4. Press the **DELAY START/CLOCK SET** key once more to start the clock.

## MICROWAVING

To cook for 2 minutes 30 seconds on 70P microwave power.

1. Enter the cooking time by pressing the **1 MIN.** key twice and the **10 SEC.** key three times.



2. Select the power by pressing the **MICROWAVE POWER LEVEL** key twice.



3. Press the **START/AUTO MINUTE** key once to start cooking.



4. The display will count down through cooking time.

# 4

# 3