

Read **SAFETY WARNINGS** in the manual before operating

Dear Customer,

Your oven has two operating modes, Energy Save Mode and Clock Set Mode. The difference between them is that when you are not using the oven, in Energy Save Mode nothing will appear on the digital display and in Clock Set Mode the time will be shown. Your oven comes pre-set for Energy Save Mode so when you first plug it in nothing will appear on the digital display.


You can change to Clock Set Mode if you prefer, see page 10 of the operation manual. If you decide to set the clock, Energy Save Mode does not work.

To operate the oven in Energy Save Mode:

1. Open the oven door. The display will show "SELECT LANGUAGE" in 6 different languages.
2. Place the food in the oven for cooking.
3. Close the door and press the **STOP** button. The display will show ". 0".
NOTE: The language that is initially selected is English. To change to a language of your choice, step through the options available by pressing the **LANGUAGE** button.
4. Set the cooking mode by rotating the **COOKING MODE** dial until it points to the appropriate symbol.
5. Select the power level required (for microwave cooking) using the **MICROWAVE POWER LEVEL** button.
6. Input the desired cooking time by rotating the **TIME/WEIGHT** dial.
7. Start the cooking process by pressing the **START** button.
8. Remove the food from the oven after the audible signal sounds.

In Energy Save Mode, if you do not operate the oven for 3 minutes or more (i.e. closing the door, pressing the **STOP** key, or at the end of cooking), you will not be able to operate the oven until you open and close the oven door.

GB CONTROL PANEL

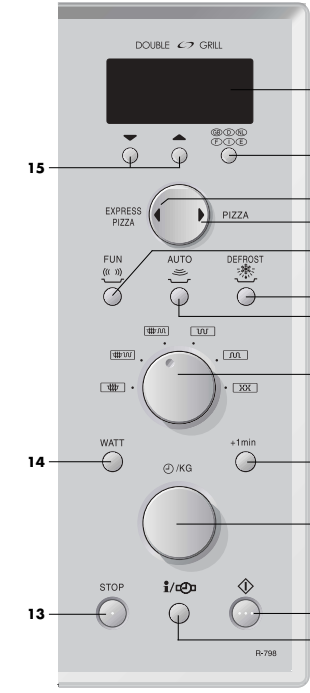

1 Digital Display

2 LANGUAGE button

3 EXPRESS PIZZA button

4 PIZZA button

5 FUN MENUS button

6 AUTO DEFROST button

7 AUTO COOK button

8 COOKING MODE dial
Rotate the dial so that indicator points to appropriate symbol:

- for microwave cooking
- for microwave cooking with TOP GRILL
- for microwave cooking with BOTTOM GRILL
- for TOP GRILL
- for BOTTOM GRILL
- for TOP & BOTTOM GRILLS

9 + 1 min button

10 TIME/WEIGHT dial
Rotate the dial to enter either the cooking/defrosting time or weight of food.

11 START button

12 INFO/CLOCK button

13 STOP button

14 MICROWAVE POWER LEVEL button
Press to change the microwave power setting.

15 LESS/MORE buttons

